




1. Remove the legs from the box inside the packaging.

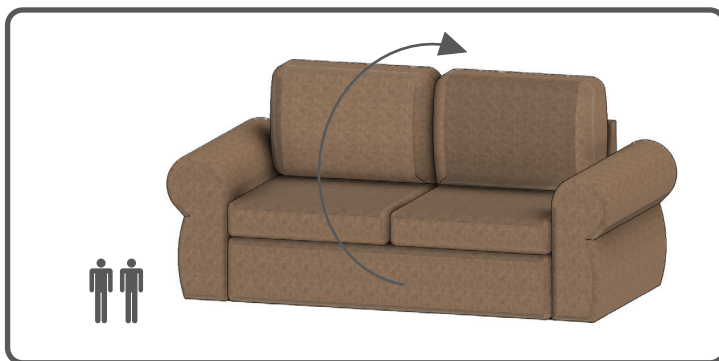


2. Turn the sofa on the backside.

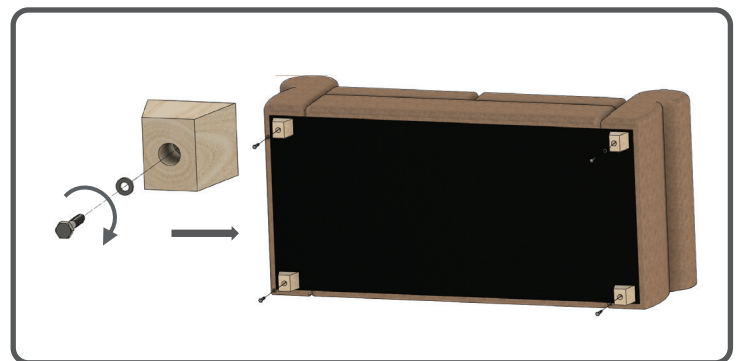

3. Use the Socket Wrench with an extension and 13 socket to fix the legs to the couch by turning the Couch Screws and washers into the pre-drilled holes.

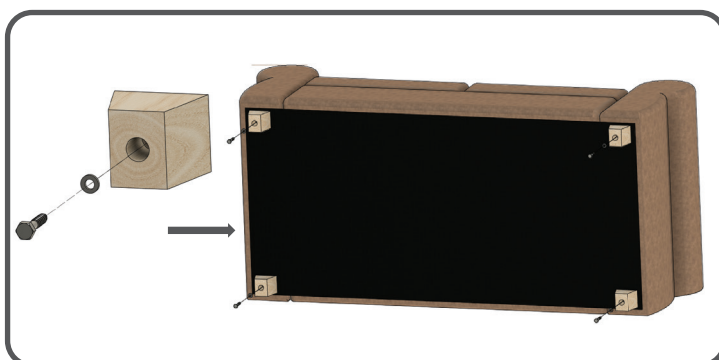

4. Attach non-slip furniture pads to bottom of feet.

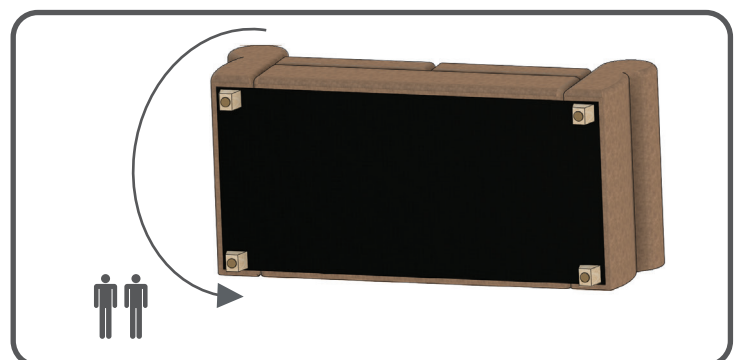

5. Carefully, turn the sofa upright and ensure that each leg is installed properly.