

What you
would need



water level



marking pencil




hammer
action drill




masonry
bit Ø10mm

- 1** Mark the hook's position on the wall, on both sides. Customise your height. then drill a Ø10mm hole, 50mm deep.

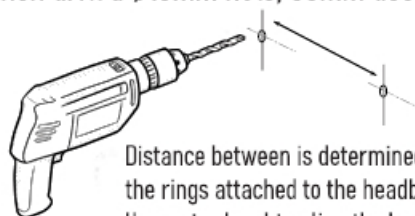


Distance between is determined by
the rings attached to the headboard.
Use water level to align the hooks.

- 2** Insert the M10 X 50 plug into the hole.

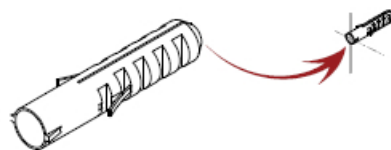

- 3** With the key provided screw in the hanger bolt, leaving 10mm thread to fasten the knob.

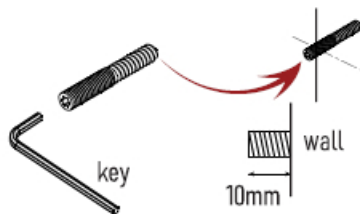

- 4** Fasten the knob onto the bolt.

